



Model No.UC4051A ELECTRIC CHAIN SAW 400MM

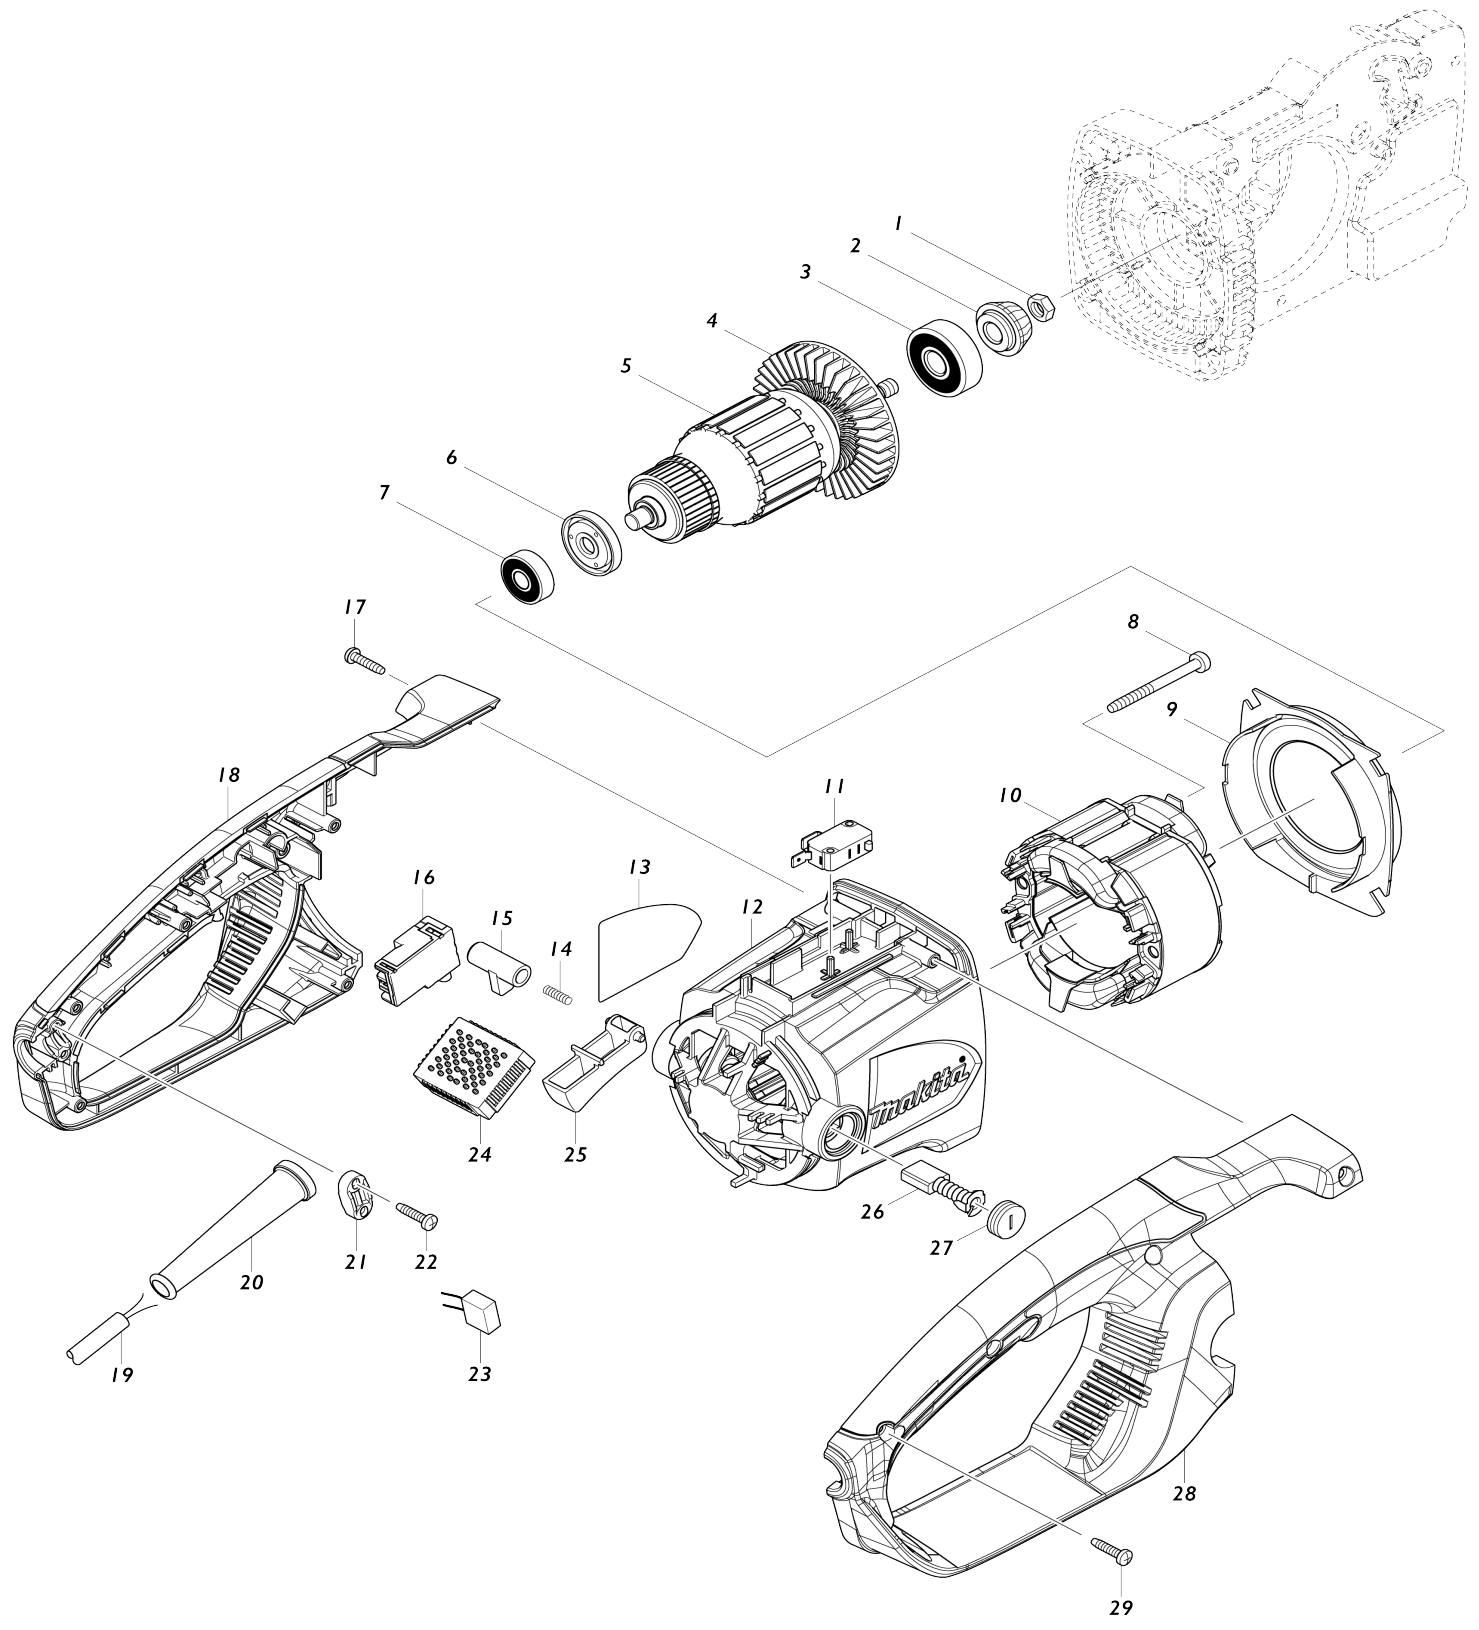

Model No. UC4051A ELECTRIC CHAIN SAW 400MM

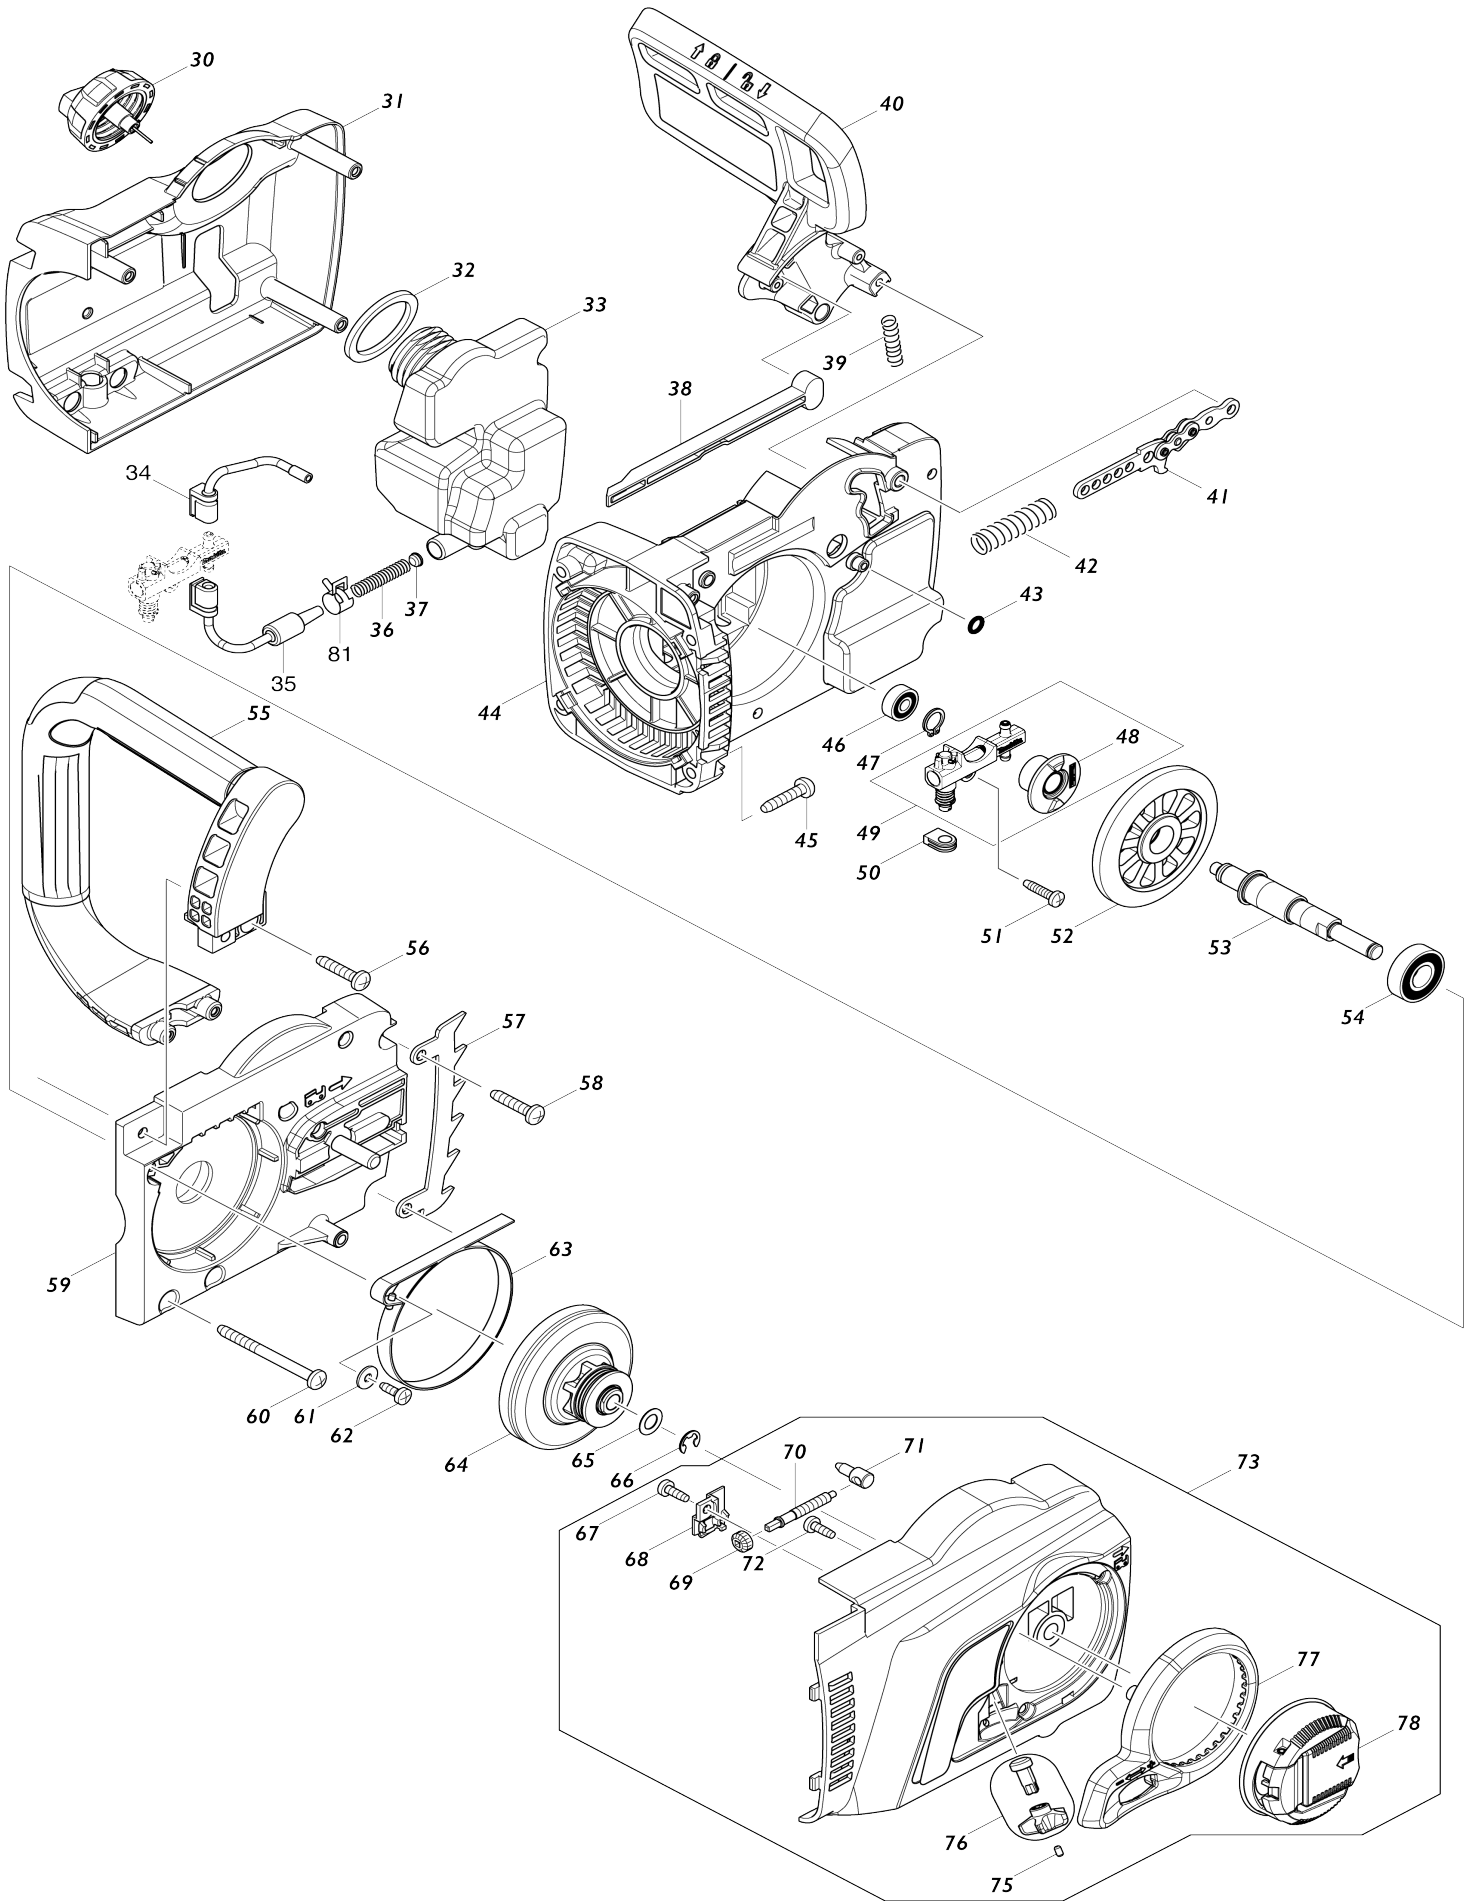

**Model No.UC4051A ELECTRIC CHAIN SAW 400MM**

Obj. č.	Obj. č.	Popis	Možn ost zá měny	Množ ství	Nový/ Starý	Poznámka 1	Poznámka 2
001	931403-6	matka M8		1		matka M8	
002	227626-5	SPIRAL BEVEL GEAR 12		1		pastorek	
003	211111-8	kuličkové ložisko 6301LLB		1		kuli	
004	240003-4	Fan 80		1		v	
005	517904-4	ARMATURE ASS'Y 240V		1		rotor ES2131 ES2136 ES2141 ES2146 UC30 50A UC3051A UC355 0A UC3551A UC4050 A	
005		INC. 3,4,6,7					
006	681666-1	podložka ES-2130A = old 970805 620		1		podlo	
007	210084-2	BALL BEARING 629ZZ		1	*		
007-1	210330-3	BALL BEARING 629ZZ	O	1			
008	266095-5	šroub 5x55		2			
009	419410-4	plastová přepážka ES-2130A =old 226118010		1		plastov	
010	636394-3	FIELD 240V		1	*	stator UC3551A=new 520156-8	
010-1	520156-8	FIELD ASS'Y 240V	<	1		stator UC3551A =old 636394-3	
C10	654020-2	RING TERMINAL F. CB-152,153		2		pru	
C20	654501-6	CONNECTOR P-1.25		2		konektor=new65455 5-3	
C30	654207-6	RECEPTACLE		1			
011	650577-1	SWITCH SD-006-BB2AA-AA		1		vyp	
012	142348-5	MOTOR HOUSING COMPLETE		1		obal motoru UC3051 A UC3551A UC4051A UC4551A	
C10	643653-8	BRUSH HOLDER 6.5-13.5		2	*		
C11	643536-2	BRUSH HOLDER 6.5X13.5	<	2		dr	
013	815G07-3	UC4051A NAME PLATE		1			
014	233173-6	pružina UC3020A-Serie		1			
015	416178-3	aretační tlačítko UC3020A=old22 5144010		1	*		
015-1	413B17-0	LOCK OFF BUTTON	<	1		areta	
016	650717-1	SWITCH TGC30B		1		vyp	
017	265995-6	šroub 4x18 = old 265941-9		1			
018	187901-0	HANDLE SET		1		rukoje	
C10	802G51-9	CAUTION LABEL		1			
018		INC. 28					
019	665894-6	POWER SUPPLY CORD 1.0-2-0.5		1		nap	
020	682540-6	ochr. průchodka 9,3-90=old6825 03-2		1		ochr. pr	
021	687124-5	držák kabelu		1		dr	
022	265995-6	šroub 4x18 = old 265941-9		2			
023	645105-5	kondenzátor = new 645006-7=ne w645200-1		1			
024	631719-6	elektronika ES-2130A =old97010 4021		1	*	elektronika ES-2130A =old970104021	
024-1	620M13-9	CONTROLLER	<	1			
025	419411-2	páčka vypínače ES-2135A =old22 6271010		1		p	

026	181044-0	uhlíky CB-153 = CB-152= old181041-6		1	*	uhl	
026-1	194985-1	CARBON BRUSH SET CB-153	O	1		uhl	
027	643650-4	víčko uhlíků		2	*	v	
027-1	643650-4	víčko uhlíků	O	2		v	
028	187901-0	HANDLE SET		1		rukoje	
C10	802G51-9	CAUTION LABEL		1			
028		INC. 18					
029	265995-6	šroub 4x18 = old 265941-9		6			
030	142282-9	TANK CAP COMPLETE		1		v	
031	454822-4	GEAR HOUSING COVER		1		pouzdro lo	
032	421959-2	gumové těsnění ES-2130A=old226114060		1		gumov	
033	454826-6	OIL TANK		1		olejov	
034	424611-1	CONNECTOR B		1		hadi	
035	424610-3	CONNECTOR A		1		hadi	
036	231975-4	pružina DCS230T/UC3020A=old021245060		1		pru	
037	416274-7	víčko DCS230T/UC3020A=old021245100		1		v	
038	454825-8	ROD		1			
039	233174-4	pružina ES-2130A=old225213060		1		pru	
040	142341-9	FRONT HAND GUARD COMPLETE		1		p	
C10	802K54-7	INDICATION LABEL		1			
041	158044-5	LINK PLATE COMPLETE		1		dr	
042	234005-0	COMPRESSION SPRING 9		1		pru	
043	213017-6	O RING 6		1		o krou	
044	454821-6	GEAR HOUSING		1		obal	
045	266041-8	šroub křížový 5103R = old 933526		4			
046	210028-2	BALL BEARING 606ZZ		1	*		
046-1	210206-4	BALL BEARING 606ZZ	O	1			
047	961006-2	segrovka S-10		1		segrovka S-10= old. 257408-1	
048	221427-3	WORM GEAR		1		n	
049	196419-0	OIL PUMP SET		1	*		
049		INC. 48			*		
049-1	142156-4	OIL PUMP COMPLETE	<	1	*	olejov	
049-2	142156-4	OIL PUMP COMPLETE	O	1		olejov	
050	424612-9	GROMMET		1		t	
051	265995-6	šroub 4x18 = old 265941-9		1			
052	227627-3	SPIRAL BEVEL GEAR 37		1		ozuben	
053	326373-6	SPINDLE		1		h	
054	210107-6	BALL BEARING 6001ZZ		1	*	lo	
054-1	210205-6	BALL BEARING 6001ZZ	O	1		lo	
055	454823-2	FRONT HANDLE		1		dr	
056	266041-8	šroub křížový 5103R = old 933526		2			
057	345651-5	ozubený doraz		1		ozuben	
058	266041-8	šroub křížový 5103R = old 933526		2			
059	319091-3	BEARING HOUSING		1		pouzdro lo	
060	266044-2	šroub 5x60		2			

061	267195-4	podložka DCS230T/UC3020A-Serie		1		podlo	
062	266026-4	šroub 4x12 křížový 5103R		1			
063	168426-3	pás brzdy = old 226213050		1		p	
064	125331-7	brzdový buben KPL. ES-2130A = old 226223111		1	*		
064-1	123886-6	BRAKE DRUM ASSEMBLY	O	1			
065	253215-0	796119		1			
066	259033-4	podložka		1		podlo	
067	266427-6	TAPPING SCREW 4X12		1			
068	454818-5	COVER		1		v	
069	227496-2	ozubené kolo UC3020A=old226213320		1		ozuben	
070	326372-8	ADJUST SCREW		1			
071	326310-0	ADJUST PIN		1			
072	266427-6	TAPPING SCREW 4X12		3			
073	142342-7	SPROCKET COVER COMPLETE		1	*		
073-1	183B54-5	SPROCKET COVER SET	<	1		kryt kompletn	
C10	142342-7	SPROCKET COVER COMPLETE		1			
073-1		INC. 67-73,75-78					
075	263002-9	vymezovací čep 4		1			
076	142665-3	DRIVE GEAR COMPLETE		1		nap	
077	454819-3	NUT COVER		1		o	
078	142235-8	NUT COMPLETE		1		up	
081	324685-1	hadička UC3020A-Serie		1		hadi	
A01	158024-1	držák=old970102050		1			
A02	165202-6	GUIDE BAR 16		1	*		
A02-1	165202-6	GUIDE BAR 16	O	1			
A03	419242-9	kryt řetězu pro UC4020A		1	*	kryt li	
A03-1	419242-9	kryt řetězu pro UC4020A	O	1		kryt li	
A04	196213-0	SAW CHAIN 16 SET		1	*		
A04-1	196213-0	SAW CHAIN 16 SET	O	1	*		
A04-2	191H12-3	SAW CHAIN 16 SET	O	1			
E01	805011-8	SOUND 103DB LABEL		1			

Prosím uveďte objednáčíslo dílu v objednávce

Datum tisku 06. 11. 2024